




Installation Menu

Installation(One end input)



1. Without inductive ballast or electronic ballast, install according to the following diagram:

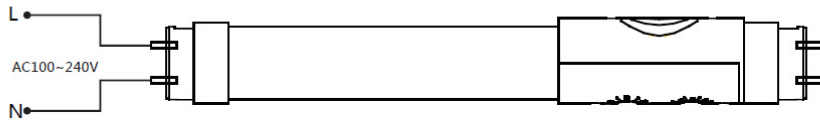

2. With an inductive ballast base:

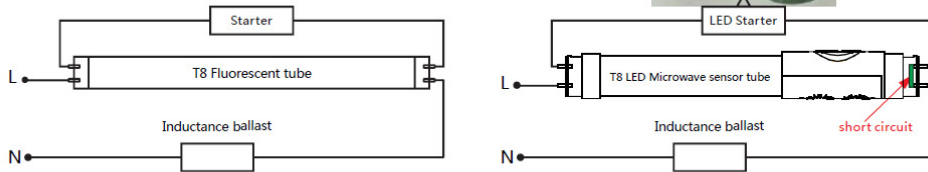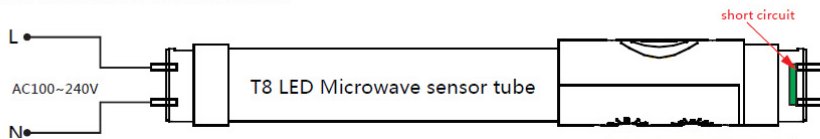

3. With electronic ballast base:

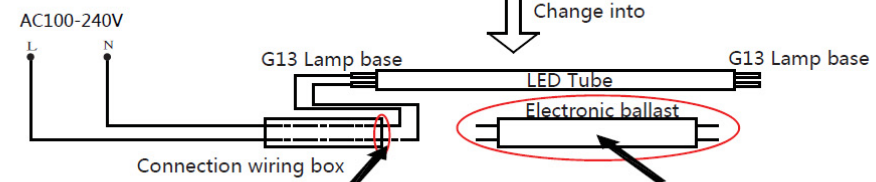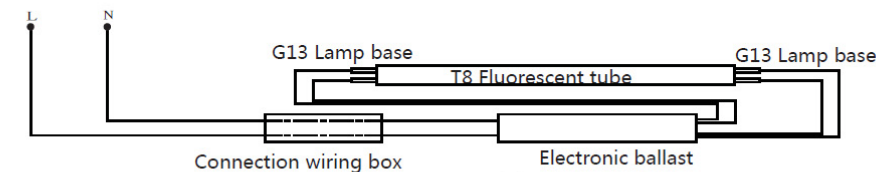

Disconnect the electronic ballast from tube wiring

Please connect the wiring according to diagram and connect the wiring per diagram in the wiring box

Adjuster Manual



Brightness Setting




Time Setting




- can not rotate 360°, otherwise it will fail (direction of rotation as above)
- the arrow must aim at number
- arrow can not aim at red area, otherwise rotation fail

Detection Range

● Microwave LED Tube

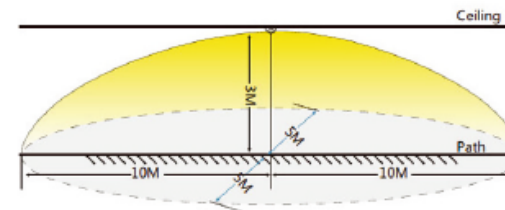

● Infrared LED Tube

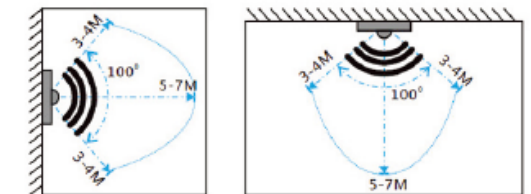

● End Cap can be adjusted by clockwise/counterclockwise 90°, so that it can focus on the detecting area and shining angle

