


Installation Instruction

DIMON
TECHNOLOGY


This installation instruction is for the PEDDY.

1 Wooden hole size diagram

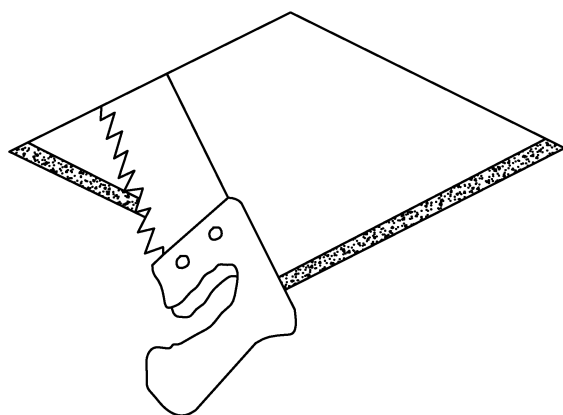


size of hole



580*580 (MM)

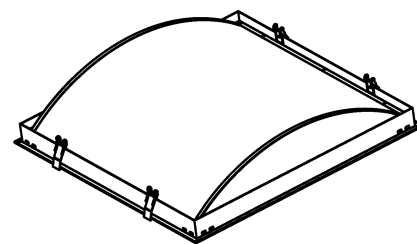


1180*280 (MM)

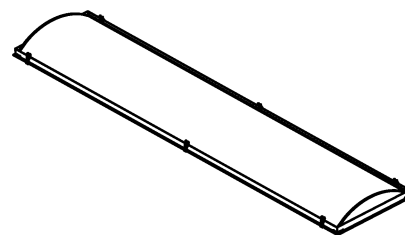


2 Installation instructions

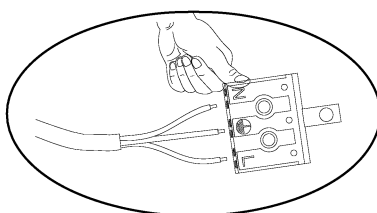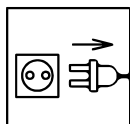

1.

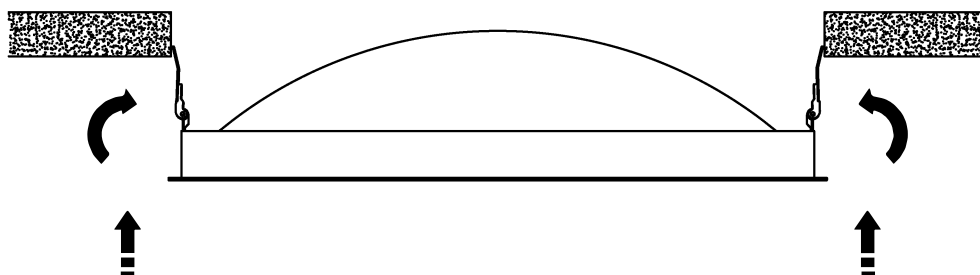

2.

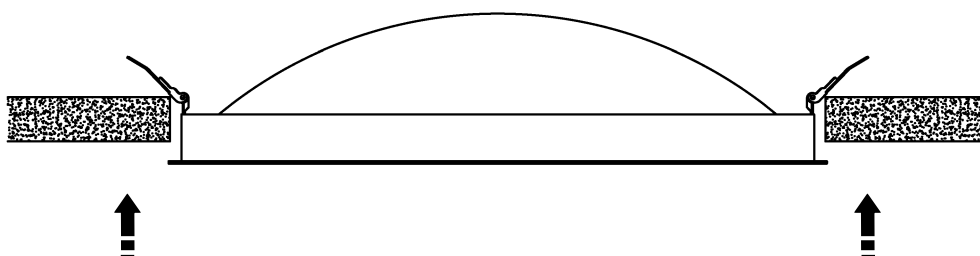

3.

